


prowork™

OFFICE CHAIR


AKIRA

ASSEMBLY INSTRUCTIONS


INCLUDED
IN THE BOX

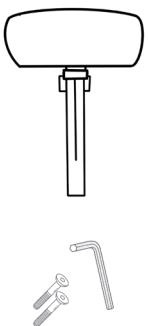

HEADREST

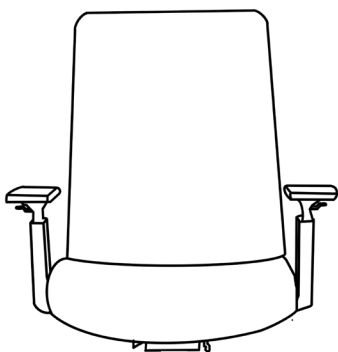

SEAT

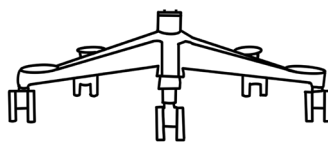

BASE



**PNEUMATIC
CYLINDER**





ARENCO COMPOUND
WAREHOUSE NO.17,
DUBAI INVESTMENT PARK 1
DUBAI - UAE

☎ (+971) 4 327 2329
☎ (+971) 52 113 7119
✉ sales@prowork.ae
🌐 www.prowork.ae

ASSEMBLY

3 STEP THREE

Insert headrest.

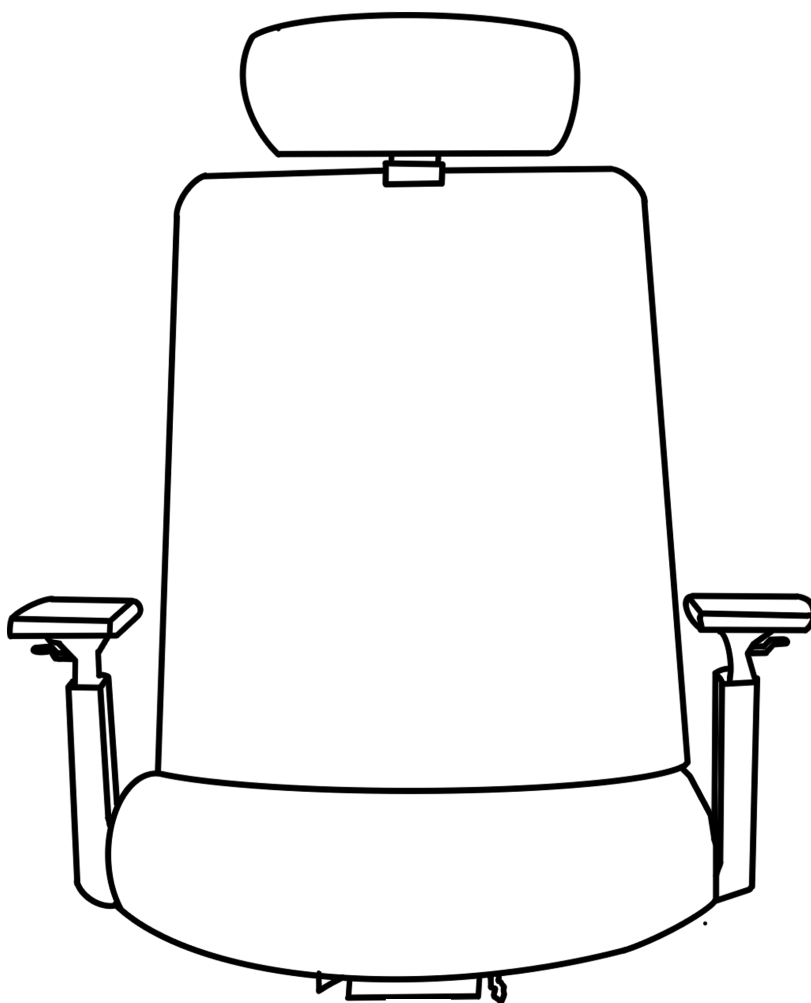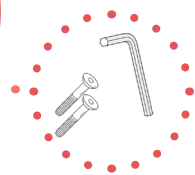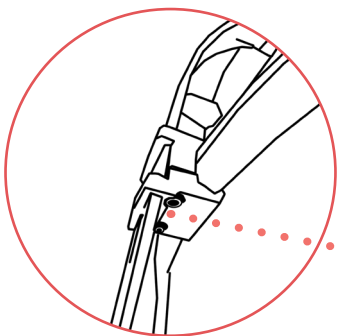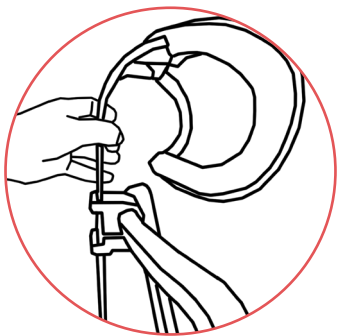


2 STEP TWO

Place the seat on top of the pneumatic cylinder



1 STEP ONE

Insert the pneumatic cylinder into the center of the base

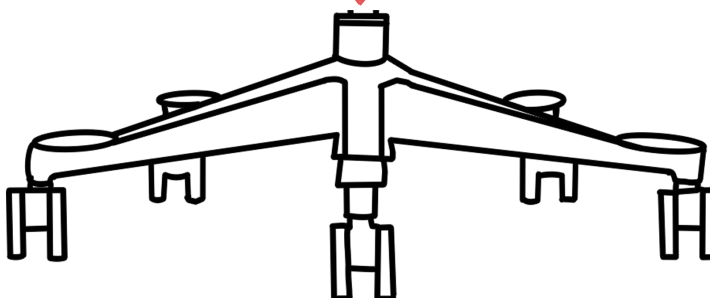

Shop the complete collection at prowork.ae

